

INSTRUCTIONS FOR UPDATING THE eNet SERVERS TO VERSION 2.2

UPDATE INSTRUCTIONS FOR eNet SERVER


Requirements for the update to eNet server software version 2.2

- ✓ The eNet server has at least firmware version 2.1 installed.
- ✓ The project on the eNet server has been saved on an external storage medium (e.g. USB stick).
- ✓ The time and date of the eNet server are correctly set and correspond to the time and date of the installation site.
- ✓ Steps have been taken to ensure that the eNet server is not disconnected from the power supply during the update process. Updating the eNet server to software version 2.2 takes between 10 – 45 minutes, depending on the project size.
- ✓ The latest version of the eNet SMART HOME app for Android or iOS V2.2 is installed on the smartphone.

UPDATE INSTRUCTIONS FOR eNet SERVER

Performing the update to eNet server software version 2.2

1. Start the eNet server on your browser and log in with your user data.
2. Click on the “gear” icon to switch to “System settings”.
3. If the update to 2.2 is available you will find it via “Online update” on the “General” tab. The eNet server can be updated in 3 different ways, which can be chosen via the “Update procedure” field.

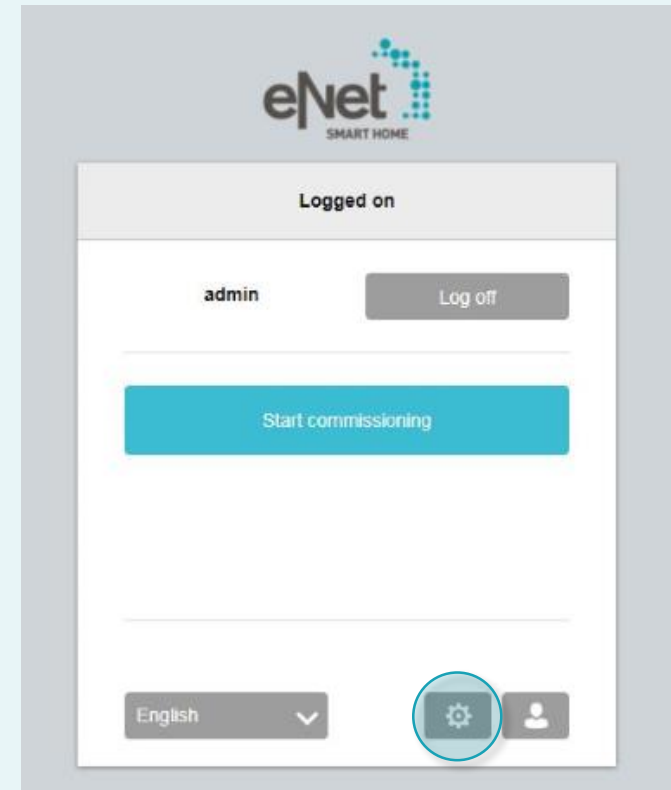

UPDATE INSTRUCTIONS FOR eNet SERVER

“Automatic search” update procedure

The “Automatic search” setting will automatically search for updates on our servers at regular intervals.

If an update is available, it is displayed in the system settings on the “General” tab, under “Online update” and in the “System overview” upon installation.

If you cannot see an update displayed, the “Search” button can be used to restart the search. If the available update is displayed, please proceed to step 4.

The screenshot shows the 'General' tab of the eNet server settings. The 'Update procedure' is set to 'Automatic search'. The 'Online update' status is 'There are no eNet server updates.' A red circle highlights the 'Search' button next to this status. Other buttons visible include 'Restart the eNet server', 'Reset eNet server', 'Apply', and 'Cancel'.

General	Time	Location	Network	Remote access
Version information				
eNet server software SERIAL	2.1.45388	eNet server hardware	2	
Update procedure	Automatic search			
Upload update file	Please select			
Online update	There are no eNet server updates.			
Lock local operation	<input type="checkbox"/>			
Buttons: Search, Restart the eNet server, Reset eNet server, Apply, Cancel				


UPDATE INSTRUCTIONS FOR eNet SERVER

“Automatic download” update procedure

The “Automatic download” setting will automatically search for updates on our website at regular intervals.

If an update is available, the update file is automatically uploaded to the eNet server and displayed on the “General” tab, under “Online update”.

If you cannot see an update displayed, the “Search” button can be used to restart the search. If the available update is displayed, please proceed to step 4.

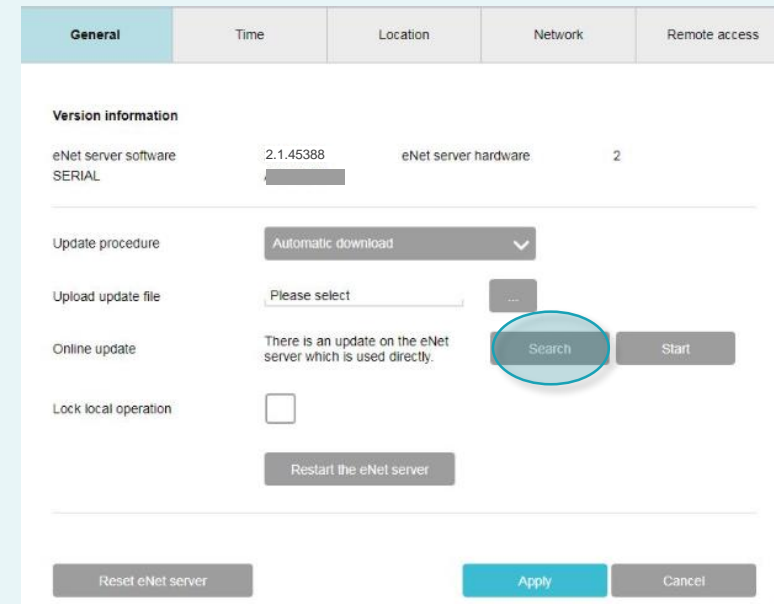

The screenshot displays the 'General' tab of the eNet server configuration window. The interface includes a top navigation bar with tabs: General, Time, Location, Network, and Remote access. The 'General' tab is active. Below the navigation bar, the 'Version information' section shows 'eNet server software' version 2.1.45388 and 'eNet server hardware' version 2. The 'Update procedure' is set to 'Automatic download'. The 'Upload update file' section has a 'Please select' button and a file selection icon. The 'Online update' section displays the message 'There is an update on the eNet server which is used directly.' and features a 'Search' button (circled in red) and a 'Start' button. The 'Lock local operation' checkbox is unchecked. A 'Restart the eNet server' button is located below the 'Lock local operation' checkbox. At the bottom of the window, there are three buttons: 'Reset eNet server', 'Apply', and 'Cancel'.

General	Time	Location	Network	Remote access
Version information				
eNet server software SERIAL	2.1.45388		eNet server hardware	2
Update procedure				
Update procedure	Automatic download			
Upload update file	Please select			
Online update	There is an update on the eNet server which is used directly.			
Lock local operation	<input type="checkbox"/>			
Restart the eNet server				
Reset eNet server				
Apply				
Cancel				

UPDATE INSTRUCTIONS FOR eNet SERVER

“Manual Download” update procedure

Using the “Manual download” setting you can upload the update file “eNetServer_2.2.46058.iuf” without internet access, via the “Upload update” point on the “General” tab.

Click on the “...” button and select the update file from your file explorer. Please proceed to step 4.

The screenshot displays the eNet Server configuration window with the 'General' tab active. The interface includes a top navigation bar with tabs: General, Time, Location, Network, and Remote access. Below the tabs, the 'Version information' section shows 'eNet server software SERIAL' as 2.1.45388 and 'eNet server hardware' as 2. The 'Update procedure' is set to 'Manual download' via a dropdown menu. The 'Upload update file' field contains the filename 'eNetServer_2.2.46058.iuf', and a blue circle highlights the file selection button (three dots) to its right. Below this, the 'Online update' section has a 'Search' button and a 'Start' button. The 'Lock local operation' section has an unchecked checkbox. A 'Restart the eNet server' button is located below the checkbox. At the bottom of the window, there are three buttons: 'Reset eNet server', 'Apply', and 'Cancel'.

General	Time	Location	Network	Remote access
Version information				
eNet server software SERIAL	2.1.45388	eNet server hardware	2	
Update procedure: Manual download				
Upload update file: eNetServer_2.2.46058.iuf		...		
Online update		Search Start		
Lock local operation: <input type="checkbox"/>		Restart the eNet server		
Reset eNet server		Apply		Cancel

UPDATE INSTRUCTIONS FOR eNet SERVER

Performing the update to eNet server software version 2.2

- 4. If an update is available, select the “Start” button to upload the update to the eNet server, if this has not already been loaded automatically. Now perform the update.

General

Time

Location

Network

Remote access

Version information

eNet server software SERIAL

2.1.45388

eNet Server hardware

2

Update procedure

Manual download

Upload update file

eNetServer_2.2.46058.iuf

...

Online update

You have chosen an own update file.

Search

Start

Lock local operation

☐

Restart the eNet server


Reset eNet server

Apply

Cancel


UPDATE INSTRUCTIONS FOR eNet SERVER

5. Please follow the instructions and read the information carefully! Select the window “Update eNet server to V2.2” and click on “Confirm”.

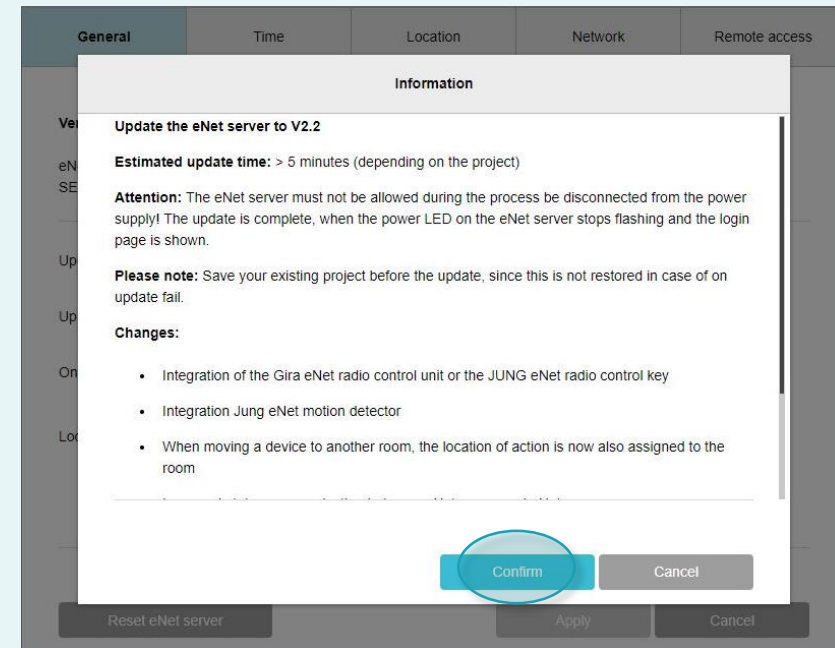

UPDATE INSTRUCTIONS FOR eNet SERVER

6. The following dialogue is now displayed: “The eNet server is being updated. Longer loading times are possible due to project conversion” The “Power LED” on the server flashes.
- ✓ The update is complete once the “Power LED” on the eNet server stops flashing and the login window is once again displayed.
- ✗ In the event of an error, please re-start the process.

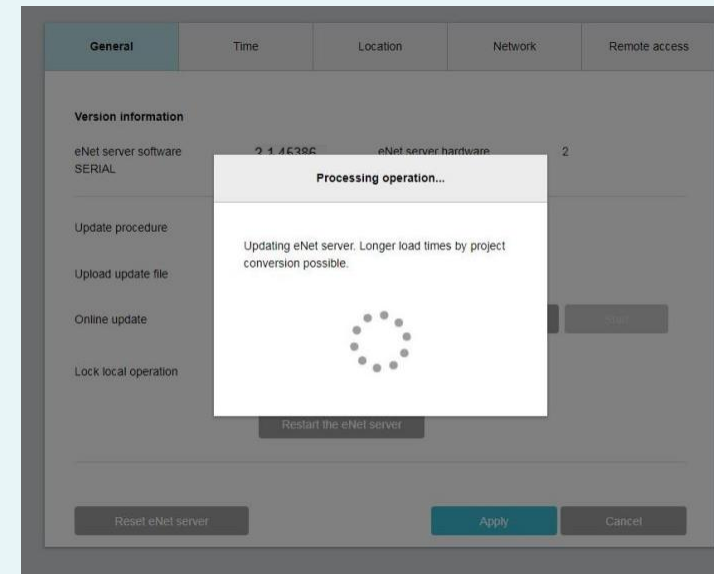


UPDATE INSTRUCTIONS FOR eNet SERVER

7. Close the open web-browser window in which you began the update process.
8. Delete the web-browser history and then re-start the browser. If you do not know how to proceed, click on the corresponding browser link (see below). There you will find a description.
 - ✓ Mozilla Firefox: >> [CLICK HERE](#)
 - ✓ Google Chrome: >> [CLICK HERE](#)
 - ✓ Internet Explorer: >> [CLICK HERE](#)
 - ✓ Microsoft Edge: >> [CLICK HERE](#)
9. Please make sure that the eNet server and your mobile phone containing the eNet “SMART HOME” app are on the same network. Launch the app and select “Connect to eNet server”.


UPDATE INSTRUCTIONS FOR eNet SERVER

10. Now you will see both the login dialogue and the IP address of the eNet server.

Android

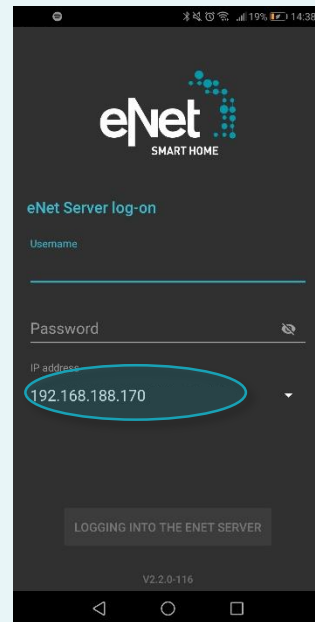

iOS

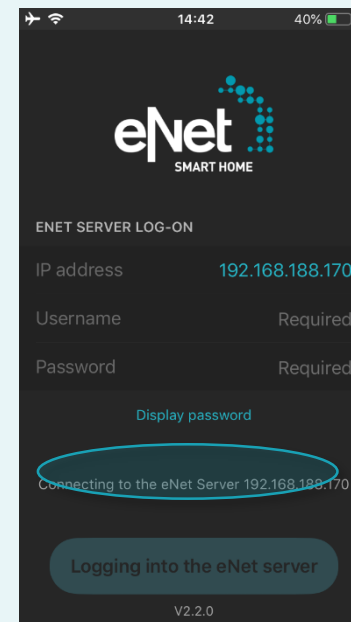

UPDATE INSTRUCTIONS FOR eNet SERVER

11. Re-start the eNet server via your web browser, and enter the IP address (which can be found in the eNet SMART HOME app) into the address bar of the web browser.
 - ✓ Your eNet server is now up-to-date and you can restart the eNet server.
 - ✗ In the event of an error, please re-start from point 1.
12. To log in, enter your login data in the launch area of the eNet server.
13. Click on the “Start” button to start.
14. Check the existing building structure and that the equipment and existing connections are complete.


UPDATE INSTRUCTIONS FOR eNet SERVER

15. Open the “Project” tab and use the “Compare project” button to calibrate the project.

- To calibrate projects, click on the “Project” button.




- Then click on “Compare project” to start.

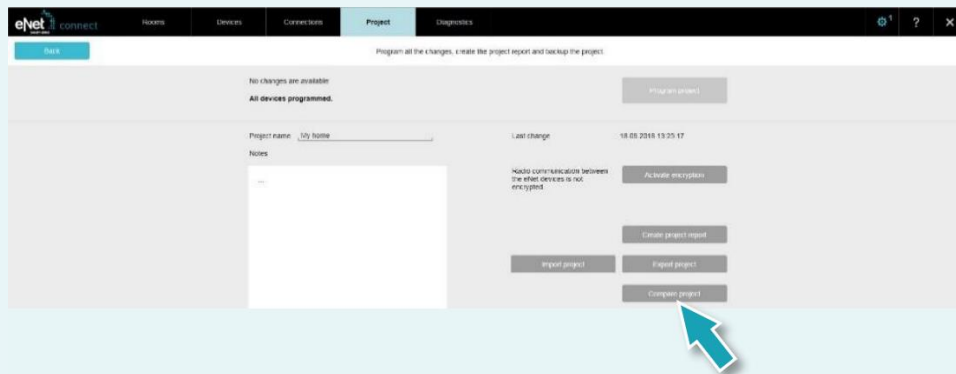

UPDATE INSTRUCTIONS FOR eNet SERVER

- The eNet server will now search all devices to read the device data. Battery-operated devices must be used for this purpose.

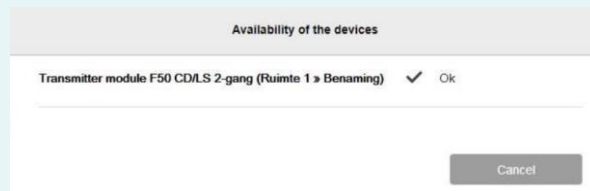


- After the eNet server has found all the devices, the following message will appear if the project data of the eNet server matches all the device data.



UPDATE INSTRUCTIONS FOR eNet SERVER

- If the eNet server detects any deviations, the following message is displayed.

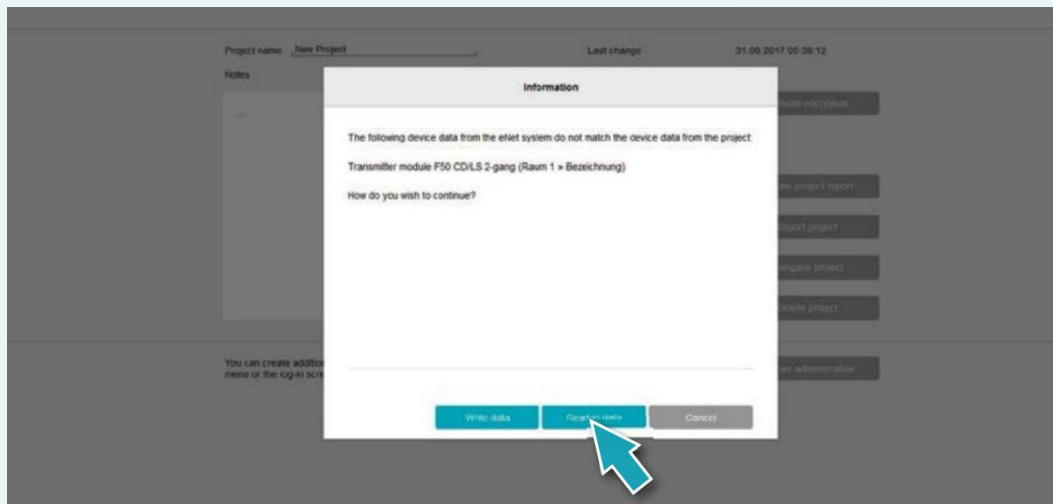


- Use the “Read data” button to transfer any deviating device data to the eNet server.

UPDATE INSTRUCTIONS FOR eNet SERVER

16. You will now see the following view via the “Project” tab.

If the “Program Project” button is highlighted in colour, you can click on this button to program the project.

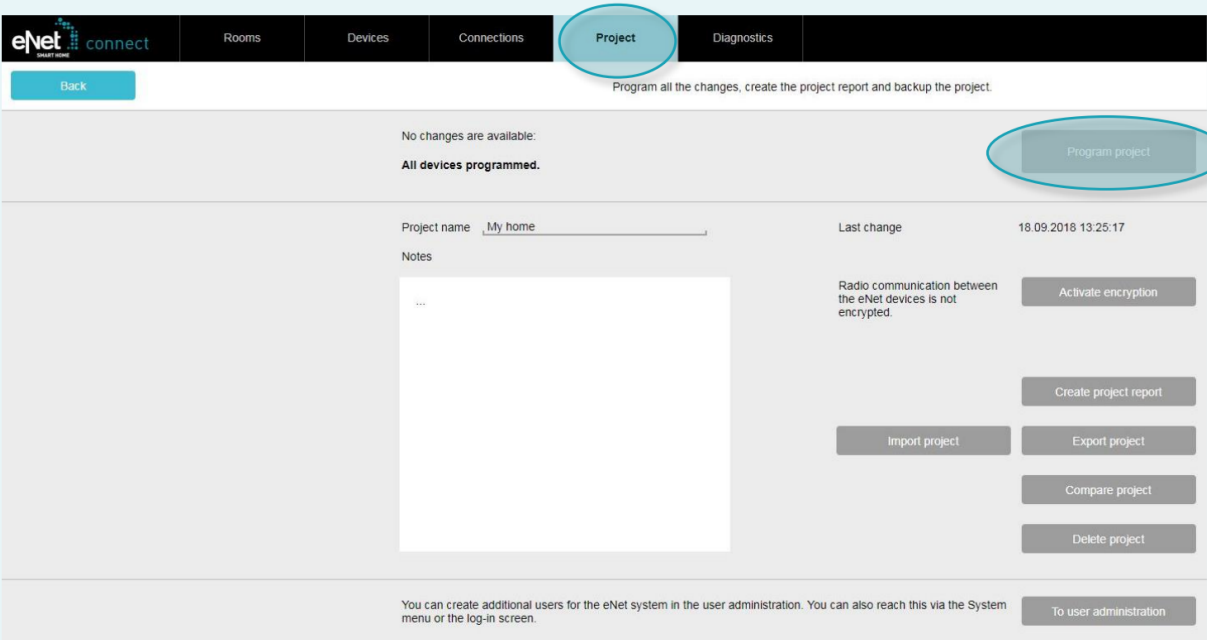

Gira
Giersiepen GmbH & Co. KG
Dahlienstraße
P.O. Box 12 20
42477 Radevormwald
Tel +49 21 95 602 0
Fax +49 21 95 602 191
www.gira.de
info@gira.de

Technical advice Gira
Tel +49 21 95 602 123
Fax +49 21 95 602 118
hotline@gira.de

JUNG
Albrecht Jung GmbH & Co. KG
Volmestraße 1
P.O. Box 1320
D-58569 Schalksmühle
Tel +49 23 55 806 0
Fax +49 23 55 806 189
www.jung.de
international@jung.de

Technical advice Jung
Tel +49 23 55 806 555
Fax +49 23 55 806 255
kundencenter@jung.de

Insta GmbH
Hohe Steinert 10
P.O. Box 1830
58468 Lüdenscheld
Tel +49 23 51 936 0
www.insta.de
info@insta.de

www.enet-smarthome.com