

# INSTRUCTIONS FOR UPDATING THE eNet SERVER TO VERSION 2.2.1

---

## UPDATE INSTRUCTIONS FOR eNet SERVER


### Requirements for the update to eNet server software version 2.2.1

- ✓ The eNet server has at least firmware version 2.1 or 2.2 installed.
- ✓ The project on the eNet server has been saved on an external storage medium (e.g. USB stick).
- ✓ The time and date of the eNet server are correctly set and correspond to the time and date of the installation site.
- ✓ Steps have been taken to ensure that the eNet server is not disconnected from the power supply during the update process. Updating the eNet server to software version 2.2.1 takes approximately 10 minutes, depending on the project size.
- ✓ The latest version of the eNet SMART HOME app for Android or iOS V2.2.1 is installed on the smartphone.

## UPDATE INSTRUCTIONS FOR eNet SERVER

### Performing the update to eNet server software version 2.2.1

1. Start the eNet server interface on your browser and log in with your user data.
2. Click on the “gear” icon to switch to “System settings”.
3. If the update to 2.2.1 is available you will find it via “Online update” on the “General” tab. The eNet server can be updated in 3 different ways, which can be chosen via the “Update procedure” field.

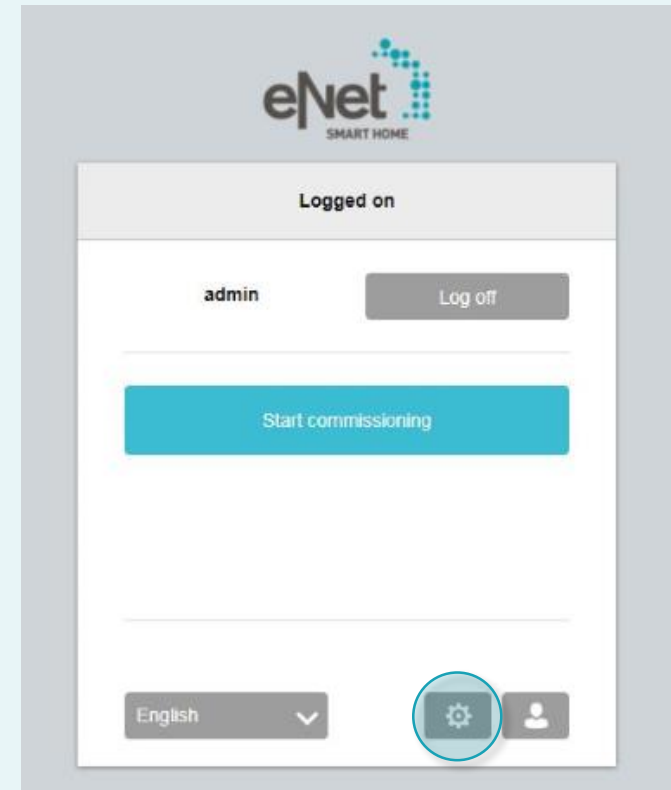


## UPDATE INSTRUCTIONS FOR eNet SERVER

### “Automatic search” update procedure

The “Automatic search” setting will automatically search for updates on our servers at regular intervals.

If an update is available, it is displayed in the system settings on the “General” tab, under “Online update” and in the “System overview” upon installation.

If you cannot see an update displayed, the “Search” button can be used to restart the search. If the available update is displayed, please proceed to step 4.

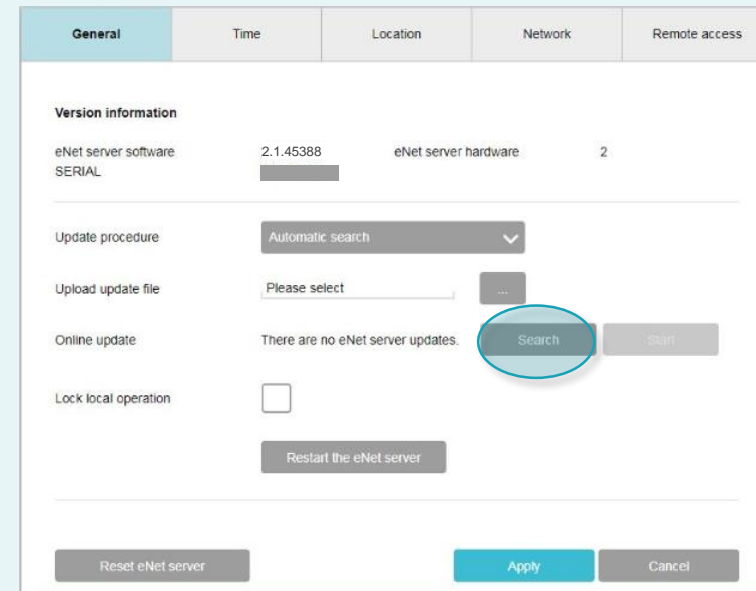

The screenshot displays the 'General' tab of the eNet server settings. The interface includes a navigation bar with tabs for 'General', 'Time', 'Location', 'Network', and 'Remote access'. Under 'Version information', the software version is 2.1.45388 and the hardware version is 2. The 'Update procedure' is set to 'Automatic search'. The 'Upload update file' field is empty with a 'Please select' prompt and a file selection icon. The 'Online update' section shows 'There are no eNet server updates.' and a 'Search' button, which is circled in red. A 'Start' button is also present. The 'Lock local operation' checkbox is unchecked. At the bottom, there are buttons for 'Reset eNet server', 'Apply', and 'Cancel'. A 'Restart the eNet server' button is located below the 'Online update' section.


## UPDATE INSTRUCTIONS FOR eNet SERVER

### “Automatic download” update procedure

The “Automatic download” setting will automatically search for updates on our website at regular intervals.

If an update is available, the update file is automatically uploaded to the eNet server and displayed on the “General” tab, under “Online update”.

If you cannot see an update displayed, the “Search” button can be used to restart the search. If the available update is displayed, please proceed to step 4.

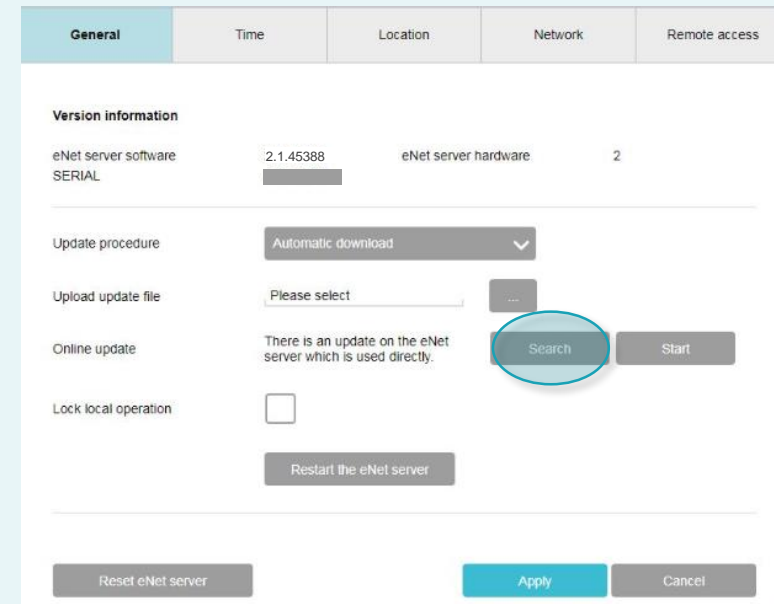


The screenshot displays the 'General' tab of the eNet server configuration interface. The interface includes a navigation bar with tabs for 'General', 'Time', 'Location', 'Network', and 'Remote access'. The 'General' tab is active. Below the navigation bar, there is a 'Version information' section showing 'eNet server software SERIAL' with the value '2.1.45388' and 'eNet server hardware' with the value '2'. The 'Update procedure' is set to 'Automatic download'. The 'Upload update file' section has a 'Please select' dropdown and a file selection button. The 'Online update' section shows a message: 'There is an update on the eNet server which is used directly.' and a 'Search' button, which is circled in red. There is also a 'Start' button. The 'Lock local operation' section has an unchecked checkbox. At the bottom, there are buttons for 'Reset eNet server', 'Apply', and 'Cancel'. A 'Restart the eNet server' button is also visible.

## UPDATE INSTRUCTIONS FOR eNet SERVER

### “Manual download” update procedure

Using the “Manual download” setting you can upload the update file “eNetServer\_2.2.1.46211.iuf” without internet access, via the “Upload update” point on the “General” tab.

Click on the “...” button and select the update file from your file explorer. Please proceed to step 4.

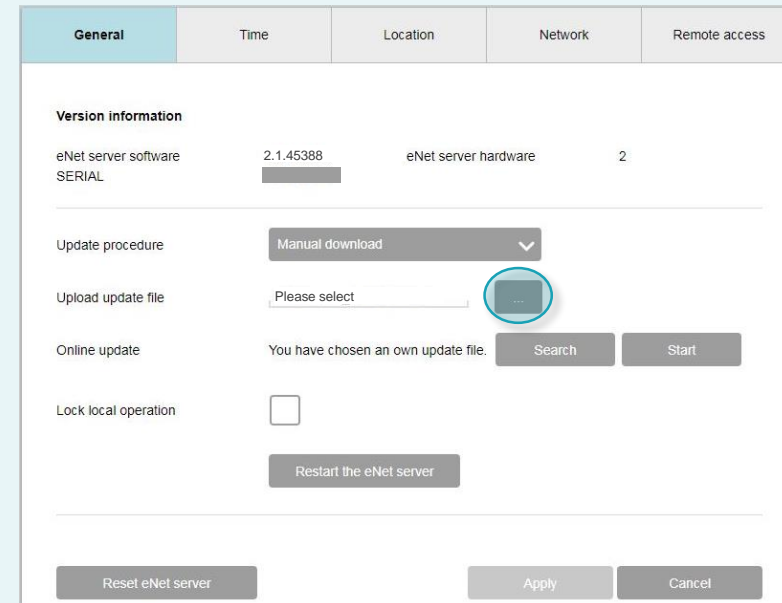


The screenshot displays the configuration interface for the eNet server, specifically the 'General' tab. The interface is organized into several sections:

- Version information:** Shows 'eNet server software SERIAL' with version '2.1.45388' and 'eNet server hardware' with version '2'.
- Update procedure:** A dropdown menu is set to 'Manual download'.
- Upload update file:** A text input field contains 'Please select', and a blue circle highlights the '...' button next to it.
- Online update:** A message states 'You have chosen an own update file.' with 'Search' and 'Start' buttons.
- Lock local operation:** An unchecked checkbox.
- Restart the eNet server:** A button located below the checkbox.
- Footer:** Contains 'Reset eNet server', 'Apply', and 'Cancel' buttons.

## UPDATE INSTRUCTIONS FOR eNet SERVER

### Performing the update to eNet server software version 2.2.1

4. If an update is available, select the “Start” button to upload the update to the eNet server, if this has not already been loaded automatically. Now perform the update.

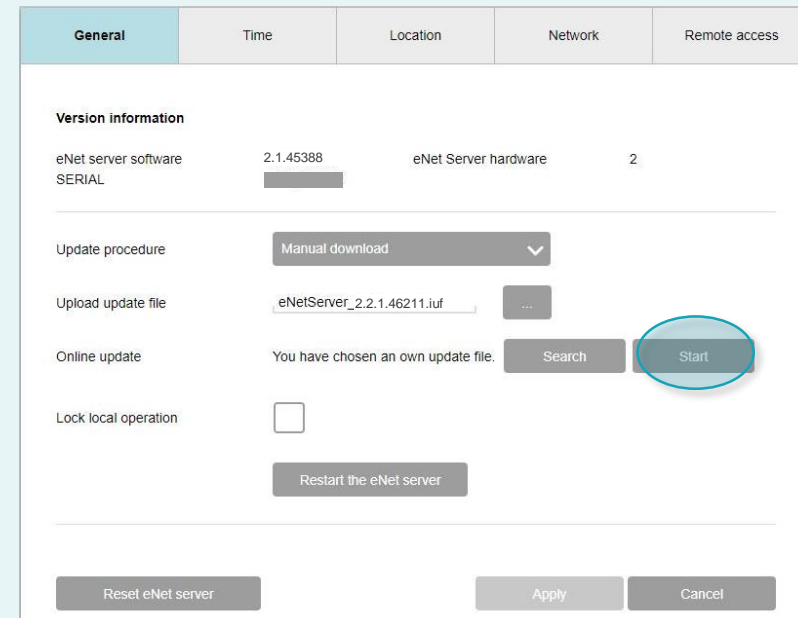


The screenshot displays the 'General' tab of the eNet server configuration interface. The 'Version information' section shows the current eNet server software version as 2.1.45388 and the eNet Server hardware version as 2. The 'Update procedure' is set to 'Manual download'. The 'Upload update file' field contains the file name 'eNetServer\_2.2.1.46211.iuf'. The 'Online update' section indicates that an own update file has been chosen, with 'Search' and 'Start' buttons. The 'Start' button is circled in red. The 'Lock local operation' checkbox is unchecked. At the bottom, there are buttons for 'Reset eNet server', 'Apply', and 'Cancel'.

General	Time	Location	Network	Remote access
<b>Version information</b>				
eNet server software SERIAL	2.1.45388	eNet Server hardware SERIAL	2	
Update procedure	Manual download			
Upload update file	eNetServer_2.2.1.46211.iuf			
Online update	You have chosen an own update file.		Search	Start
Lock local operation	<input type="checkbox"/>			
Restart the eNet server				
Reset eNet server	Apply	Cancel		

## UPDATE INSTRUCTIONS FOR eNet SERVER


5. Please follow the instructions and read the information carefully!  
Select the window "Update eNet server to V2.2.1" and click on "Confirm".

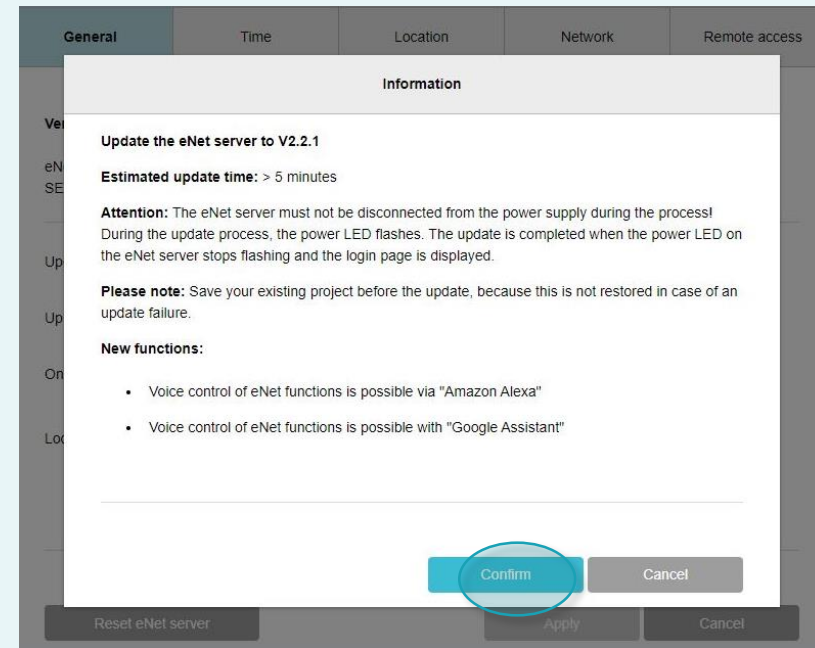



## UPDATE INSTRUCTIONS FOR eNet SERVER

6. The following dialogue is now displayed: “The eNet server is being updated. Longer loading times are possible due to project conversion” The “Power LED” on the server flashes.
  - ✓ The update is complete once the “Power LED” on the eNet server stops flashing and the login window is once again displayed.
  - ✗ In the event of an error, please re-start the process.

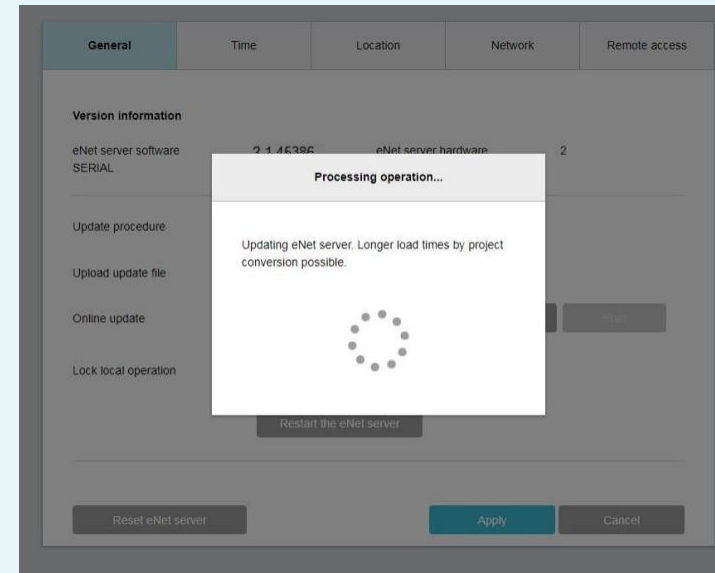


## UPDATE INSTRUCTIONS FOR eNet SERVER

7. Close the open web-browser window in which you began the update process.
8. Delete the web-browser history and then re-start the browser. If you do not know how to proceed, click on the corresponding browser link (see below). There you will find a description.
  - ✓ Mozilla Firefox:     >> [CLICK HERE](#)
  - ✓ Google Chrome:     >> [CLICK HERE](#)
  - ✓ Internet Explorer:   >> [CLICK HERE](#)
  - ✓ Microsoft Edge:     >> [CLICK HERE](#)
9. Please make sure that the eNet server and your mobile phone containing the eNet “SMART HOME” app are on the same network. Launch the app and select “Connect to eNet server”.


# UPDATE INSTRUCTIONS FOR eNet SERVER

10. Now you will see both the login dialogue and the IP address of the eNet server.

Android

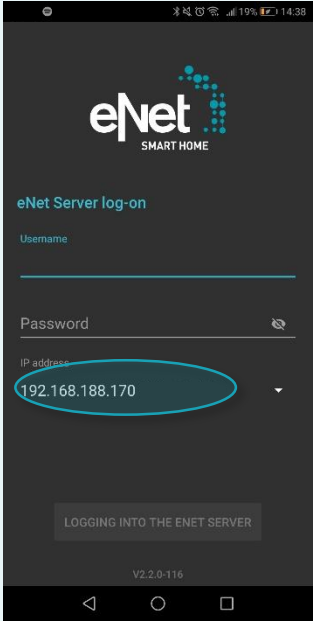

iOS

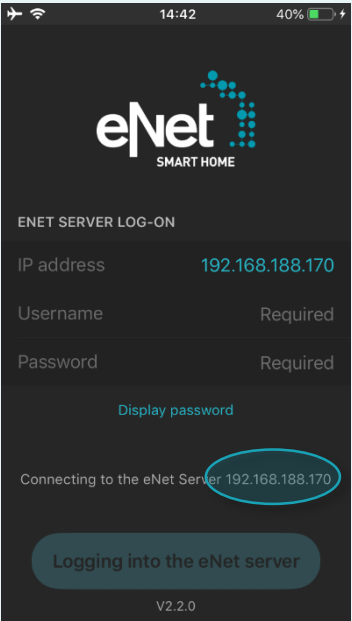

## UPDATE INSTRUCTIONS FOR eNet SERVER

11. Re-start the eNet server via your web browser, and enter the IP address (which can be found in the eNet SMART HOME app) into the address bar of the web browser.
  - ✓ Your eNet server is now up-to-date and you can restart the eNet server.
  - ✗ In the event of an error, please re-start from point 1.
12. To log in, enter your login data in the launch area of the eNet server.
13. Click on the “Start” button to start.
14. Check the existing building structure and that the equipment and existing connections are complete.


## UPDATE INSTRUCTIONS FOR eNet SERVER

15. Open the “Project” tab and use the “Compare project” button to calibrate the project.

- To calibrate projects, click on the “Project” button.




- Then click on “Compare project” to start.

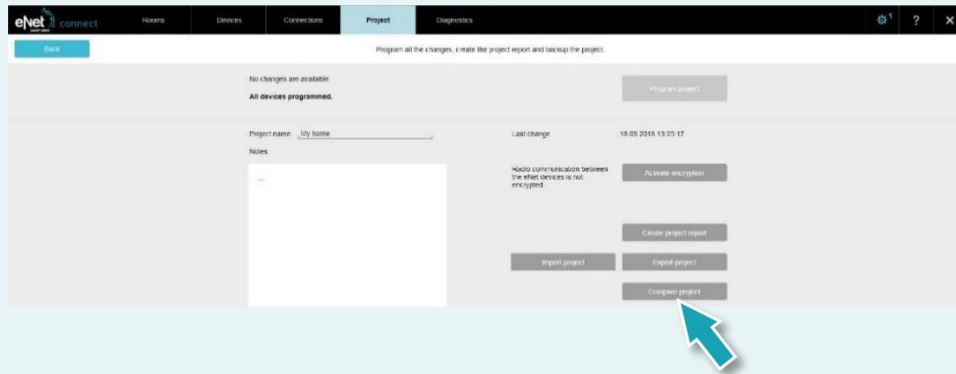

## UPDATE INSTRUCTIONS FOR eNet SERVER

- The eNet server will now search all devices to read the device data. Battery-operated devices must be used for this purpose.

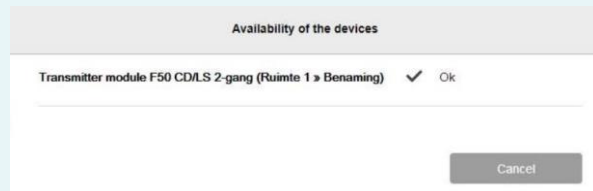


- After the eNet server has found all the devices, the following message will appear if the project data of the eNet server matches all the device data.



## UPDATE INSTRUCTIONS FOR eNet SERVER

- If the eNet server detects any deviations, the following message is displayed.

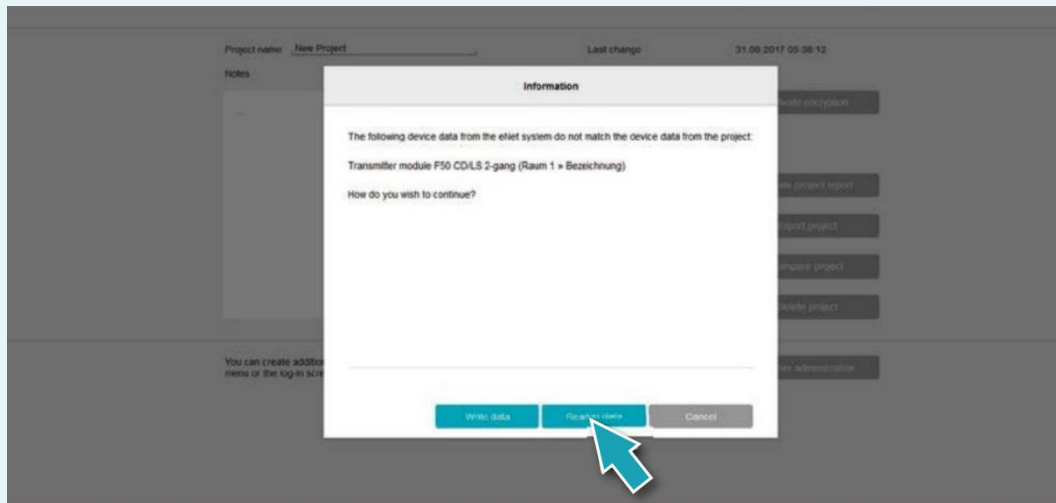


- Use the "Read data" button to transfer any deviating device data to the eNet server.

## UPDATE INSTRUCTIONS FOR eNet SERVER

16. You will now see the following view via the “Project” tab.

If the “Program project” button is highlighted in colour, you can click on this button to program the project.

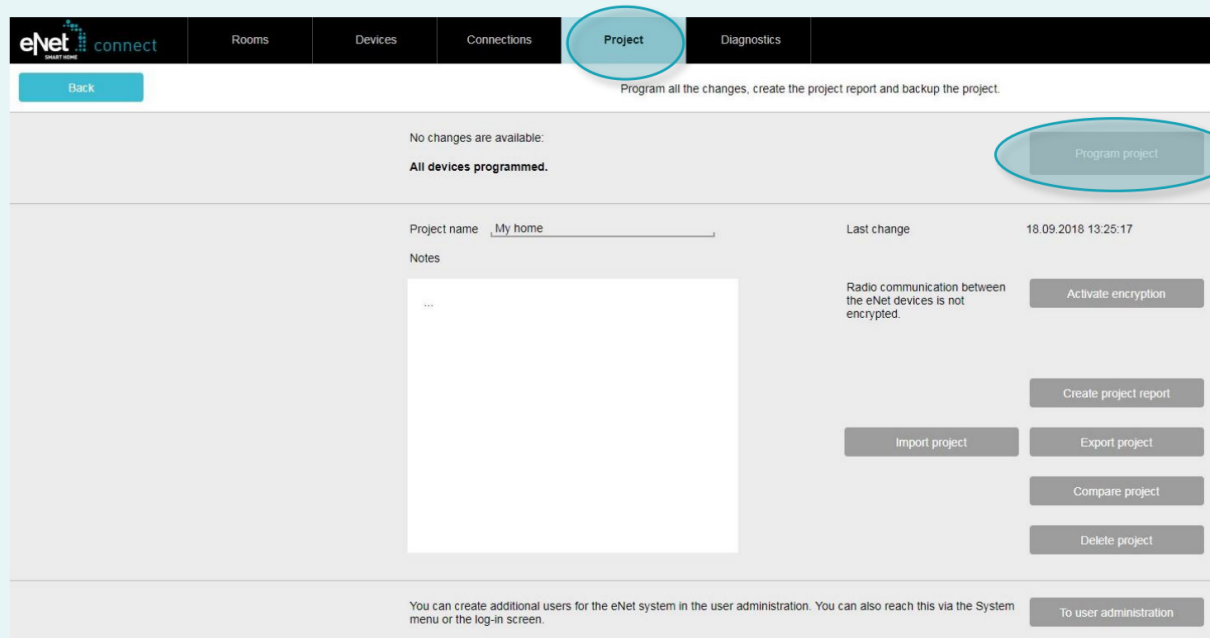

The screenshot displays the eNet Connect software interface. At the top, a navigation bar includes tabs for Rooms, Devices, Connections, Project (highlighted with a blue circle), and Diagnostics. Below the navigation bar, a blue 'Back' button is visible on the left, and a subtitle reads 'Program all the changes, create the project report and backup the project.' The main content area shows a status message: 'No changes are available. All devices programmed.' To the right of this message, the 'Program project' button is highlighted with a blue circle. Below the status message, there is a form for 'Project name' (containing '\_My home') and 'Last change' (showing '18.09.2018 13:25:17'). A 'Notes' section contains a text area with '...'. On the right side, there are several buttons: 'Activate encryption', 'Create project report', 'Import project', 'Export project', 'Compare project', and 'Delete project'. At the bottom, a footer message states: 'You can create additional users for the eNet system in the user administration. You can also reach this via the System menu or the log-in screen.' A 'To user administration' button is located at the bottom right.



Gira  
Giersiepen GmbH & Co. KG  
Dahlienstraße  
P.O. Box 12 20  
42477 Radevormwald  
Tel +49 21 95 602 0  
Fax +49 21 95 602 191  
[www.gira.de](http://www.gira.de)  
[info@gira.de](mailto:info@gira.de)

Technical advice Gira  
Tel +49 21 95 602 123  
Fax +49 21 95 602 118  
[hotline@gira.de](mailto:hotline@gira.de)

JUNG  
Albrecht Jung GmbH & Co. KG  
Volmestraße 1  
P.O. Box 1320  
D-58569 Schalksmühle  
Tel +49 23 55 806 0  
Fax +49 23 55 806 189  
[www.jung.de](http://www.jung.de)  
[international@jung.de](mailto:international@jung.de)

Technical advice JUNG  
Tel +49 23 55 806 555  
Fax +49 23 55 806 255  
[kundencenter@jung.de](mailto:kundencenter@jung.de)

Insta GmbH  
Hohe Steinert 10  
P.O. Box 1830  
58468 Lüdenscheid  
Tel +49 23 51 936 0  
[www.insta.de](http://www.insta.de)  
[info@insta.de](mailto:info@insta.de)

[www.enet-smarthome.com](http://www.enet-smarthome.com)